

Thank you for purchasing your Tickers Interactive Watch. Please follow these instructions carefully and we'll soon have you up & running with your new watch. If you need any help or have any questions then please get in touch, we'll be happy to help you.



WHAT'S IN THE BOX?

 
- 1 Interactive watch (with built-in Li-ion battery*1)
- 1 Micro USB cable
- 1 User's Manual

QUICK START GUIDE

Press the home (on/off) button to wake the watch up. Press the home button for 3 seconds to wake up the watch from standby.

The watch may come with a small amount of charge, but we recommend a full charge before using. A full charge will take about 3 hours.

When turning the watch on for the first time, the date and time setting screen will display first. Swipe up and down over the month, day, year, hours and minutes to select the current date and time.

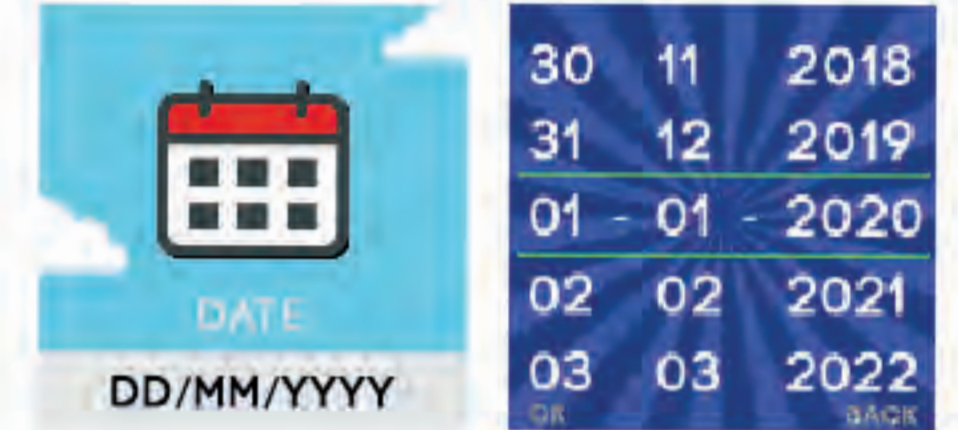

When the clock is displayed on screen, press the home button to go to the home menu.

NOTES:

- If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after recharging.
- When the battery level is too low, only the clock display function is available. We recommend recharging the battery as soon as possible before further use.

AUTOMATIC SCREEN OFF

To preserve the battery life, the screen will automatically shut off after a short period of time when in clock mode. Note: The auto screen off time can be set in Settings / Brightness Time. Please refer to the Settings section in this manual.

ACTIVITIES

CLOCK DISPLAY

When the home button is pressed, the clock will be displayed. Tap the center of the screen to switch the clock face between analogue and digital. There are 10 analogue and 10 digital clock faces to choose from. Swipe left or right on the screen to see more clock faces. Press the home button to display the home menu for selecting other activities.

HOME MENU

Press the home button to display the home menu. There are 16 different sections to choose from:

- | | | |
|-----------------|-------------------|--------------------|
| 1. Time Teacher | 6. Timer | 12. Calculator |
| 2. Alarm | 7. Games | 13. Torch |
| 3. Calendar | 8. Camera | 14. Voice Recorder |
| 4. Step Counter | 9. Video | 15. Background |
| 5. Stopwatch | 10. Photo Gallery | 16. Settings |
| | 11. Video Gallery | |

- Tap the icon to enter the activity.
- Swipe left or right to scroll through the menu pages.

1. TIME TEACHER

Select the time teacher option from the main menu. Here you can make the owl character speak the selected time.

- Tap the hour icon or minute icon to select the time you want to hear.
- Tap to increase the hour / minute.
- Tap to decrease the hour / minute.
- Tap the clock or the owl to hear the time.



Note: If the battery level is too low, the alarm will need to be set again.

2. ALARM

Select the alarm option from the main menu. Here you can set an alarm.

- Tap the clock icon on screen to change the alarm time.
- Tap the tick icon on screen to confirm the time setting. An alarm icon will appear in the top left of the home screen.

To change the alarm time:

- Select the hour & minute by swiping up or down on hours and minutes.
- Tap 'OK' to confirm the chosen time.

Note: If the battery level is too low, the alarm will need to be set again.



3. CALENDAR


Select the calendar option from the main menu. Here you can view the days of the year shown month-by-month.



4. STEP COUNTER

Select the step counter option from the main menu. You can record your step count & the time in which you take them.

- Tap the play icon on screen to start recording the time.
- As you walk, it will count your steps automatically.
- Tap the pause icon on screen to stop recording.
- Tap the reset icon on screen to set your time and step count back to zero.

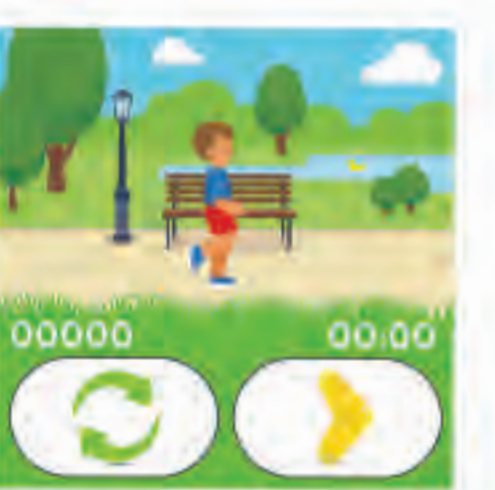

The step counter will keep recording whilst you use other activities until you instruct it to stop. When it is running, a small red icon will display on your home screen.

5. STOPWATCH





Select the stopwatch option from the main menu.

- Tap the play icon on screen to start the stopwatch.
- While the stopwatch app is running, tap the pause icon on screen to pause the timer, tap it again to resume.
- Tap the reset icon to stop the stopwatch and reset back to zero.




6. COUNTDOWN TIMER

 Select the timer option from the main menu.
Set a countdown timer here.

- Tap the play icon on screen  to start the timer.
- Tap the pause icon  to pause the timer, tap it again to resume.
- Tap the reset icon  to stop the timer and reset back to full time.
- Tap the clock icon on screen  to enter the timer settings.
Swipe up or down on the minutes and seconds to change the time.
Once set, press 'OK' to return back and save.



7. GAMES

 Select the games option from the main menu. There are 5 built-in games to play.
Swipe the screen to see the game icons, then tap one to play.

- **2048** How to play: Swipe up, down, left or right to move the tiles across the board. The tiles will slide in the swipe direction; meanwhile a new tile will emerge randomly in the board. When the tiles with the same number meet, they will merge into one tile.
- **Basketball Shoot Master** How to play: Press the basketball to shoot, when the backboard is going to move to the middle, control to shoot.
- **Bee War** How to play: Tap the screen left or right to move the fighter to shoot. Blue enemies need to be hit twice. Score as many point as you can! You have three lives.
- **Pinball Hit Bricks** How to play: Destroy all bricks to progress to the next level. White bricks give a special 3-ball bonus. Blue bricks need to be hit twice. Score as many points as you can!
- **Ultimate Racing** How to play: Hold the car to move left and right to switch lanes. The car in front may drop gold coins. Eat as many gold coins as possible and power signs to speed up. You only have one life so avoid collisions!


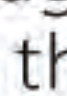

8. CAMERA

 Select the camera option from the main menu.


- Press the shutter icon on screen  to take a photo.
- Tap the playback icon on screen  to view your photo gallery.
(You can also view your photo gallery from the main menu.)
- To delete an image, tap 'options' on screen and select 'delete'.
- Tap 'back' to return to camera mode.


9. VIDEO

 Select the video option from the main menu.


- Press the record icon on screen  to start recording.
While recording, press the record icon again to stop.
- When you finish recording a video, tap the arrow  to save
- Tap the playback icon on screen  to go to your gallery.
(You can also view your video gallery from the main menu.)
- To delete a video, tap 'options' on screen and select 'delete'.
- Tap 'back' to return to camera mode.


10. PHOTO GALLERY

 Select the photo gallery option from the main menu.
Here you can browse your photos.


- The latest file will be shown first, tap the arrow icons or swipe the screen to see the previous or next file.
- Tap the rubbish bin icon on screen  to display the delete menu.

11. VIDEO GALLERY

 Select the video gallery option from the main menu.
Here you can browse your videos.

- The latest file will be shown first, tap the arrow icons or swipe the screen to see the previous or next file.
- Tap the play icon on screen to play the video.
- Tap the rubbish bin icon on screen  to display the delete menu.


12. CALCULATOR

 Select the calculator option from the main menu.
Functions include plus, minus, multiply and divide.

- Tap 'clear' to reset to zero.
- Tap 'back' to go back to main menu.




13. TORCH


 Select the torch option from the main menu.
A picture of a torch will appear.

- Tap the screen to turn the torch on and tap again to turn off.


The torch will remain on whilst you use other activities until you turn it off.
Please keep torch away from eyes and do not shine it at other people.

14. VOICE RECORDER

 Select the voice recorder option from the main menu.


- Tap the record icon on screen  to start the voice recording.
While recording, tap the record icon again to stop.
- Swipe the screen to see the previous or next file.

15. BACKGROUND

 Select the background option from the main menu.
Here you can select from 4 different options for your main background.



- Tap the arrows right and left to view the different colour options.
- Tap 'Select your background' to activate.
- The screen will automatically take you back to your home screen.

16. SETTINGS



 Select settings from the main menu.
Swipe left or right on the screen to scroll through different setting items.

Here you can adjust the following items:

(A) Volume

- Tap  to increase the volume.
- Tap  to decrease the volume.

(B) Brightness

- Tap  to increase the LCD brightness.
- Tap  to decrease the LCD brightness.

(C) Brightness Time

- Tap  to increase the time (seconds) that the screen will stay lit for.
- Tap  to decrease the time (seconds) that the screen will stay lit for.

(D) Date

- Tap screen to enter the date setup screen.
- On the date setup screen, swipe up or down on the month, day and year to scroll through the options.

(E) Time

- Tap screen to enter the time setup screen.
- On the time setup screen, swipe up or down on the hours & minutes, then press OK.
- You can select 12 hour or 24 hour display on the time main screen.
Press the home button to set.

(F) Parental Control

Here you can set time limits for daily game play.

- To access the parental control settings, tap & hold the Parental Control screen for 3 seconds until the screen changes.
- You will then be asked to identify a colour and tap three times to confirm.
- You can now select the amount of game time per day, 15, 30, 60 or 90 minutes.
You may also disable the games.
- Select the tick icon to set.

(G) Advanced

(i) Storage Location

- Here you can see the free memory remaining on your watch or choose to format the memory. Follow the instructions on screen if you would like to format the memory.
Note: Format will erase all data in the memory, including all photos, videos and voice recordings.

(ii) Language

Tap to select the desired language, and then select 'done' to set.

(iii) Factory Reset

Factory Reset will erase the contents stored in the memory and reset all system settings to factory default, e.g file index, frequency, video resolution, game level and clock face. Follow the instructions on screen to confirm the action.



TURN SCREEN OFF

Return to the home screen and press the home button twice, consecutively.

TURN WATCH OFF

Return to the home screen and hold the home button for 3 seconds.

TIPS

- How to Touch Screen
 - When you touch the screen, ensure your entire fingertip is pressing the screen and hold for a second. Do not use your fingernails.
- How to view images/videos on your laptop/computer.
 - Connect the interactive watch to your laptop/computer using the USB cable included.
 - Photos and videos can be found in the 'Photo' folder, while voice recordings can be found in the 'Record' folder.

TROUBLESHOOTING

Go through this section if you experience difficulty in operating the Interactive watch.

Problem	Solution
The watch has stopped working or the screen display is abnormal	<ol style="list-style-type: none"> Hold the home button for 3 seconds to turn off and then hold the home button again to turn back on. The hole next to the USB cover is for resetting. To press the reset button, use an unfolded paperclip to insert and then remove (adult supervision needed). Hold the home button for 2 seconds to turn on. If it doesn't work, try to recharge the battery and try again. (Refer to the battery recharging section for details).
Cannot connect to a computer	<ol style="list-style-type: none"> Check the connections on the USB cable between the watch and the computer and review the appropriate connection procedures in this manual. Hold the home button for 30 seconds to turn off. Hold it again to turn back on and re-connect to the computer.
Image taken is not clear	<ol style="list-style-type: none"> Make sure the lighting conditions of the shooting environment are good. Check to see if the camera lens is clean. If you find some dust or dirt on it, please see the steps to clean the lens in the Care & Maintenance section in this manual.
Not enough memory	If you have run out of memory, you will need to delete some of your files. These may include photos, videos and voice recordings. Alternatively, to delete all data, please follow the instructions in the memory section under 'Settings > Advanced > Storage Location' in this manual.

CONTACT US

If you cannot find what you are looking for then please get in touch with our Customer Service Team, they are here to help Monday to Friday, 9AM to 5PM.

- +44 (0) 121 524 1400
- Tickers@peershardy.co.uk

You can also go to our website where you will find lots of helpful information.

OR scan the below code to go straight there! Just simply hold your Smartphone camera over the square below and it will direct you to our site!




PRODUCT SPECIFICATION

Display	1.54" sensitive colour touch screen
Photo Resolution	240 X 240
Video Resolution	240 X 240
Internal Memory	128 MB built-in memory (shared with program data, actual memory available for user storage will be less)
Storage Capacity	Photos: approx. 450-600 Videos: approx. 3 minutes. Note, The above amounts are approximations, the actual amount depends on the shooting environments. Voice Recorder: approx 40 minutes.
File Format	Photos: Standard Baseline JPEG Video: AVI (Motion JPEG)
Connectivity	Micro USB 2.0 cable (included) for connection with computer
Battery	Li-ion Polymer battery (battery is not replaceable)
Optimum Operating and Charging Temperature	32°F - 104°F (0°C - 40°C)

BATTERY RECHARGING

Note: Adult operation needed.

Connect the Interactive watch to a computer with the included micro USB cable to charge the battery.

- Pull up the rubber cover of the micro USB port at the side of your watch.
- Insert the micro USB cable (small end) into the micro USB port on the watch.
- Insert the larger end of the micro USB cable into a USB port on the computer. A USB port is usually marked with this symbol .
- Once the connection is successful, you will see the battery recharging symbol displayed on the watch screen for one second, and then the data transferring symbol will appear. The battery is always under charging during this connection, you can open PC to find the folder named 'Smart Watch' to transfer data at this time.
- Check the charging progress regularly throughout the process.
- When the battery is fully charged, a full battery symbol will display on the screen. You can then disconnect the watch from your computer.

Note: It will take approximately 3 hours to fully charge the battery. The actual charging time depends on the power supply, the remaining charge and the ambient temperature of the charging environment. If your watch needs longer than 3 hours to fully charge, please try charging from a different USB power source.

BATTERY LIFE

The time the battery lasts between charges depends on play. Like other electronic devices, more frequent usage will mean the battery will drain more quickly. Some activities will be more demanding on the battery, such as taking photos and videos.

Condition	Battery Time
Low Usage	2 weeks
Typical Usage	2-3 days
Heavy Usage	1 day

Note: The above battery time is based on the assumption that the screen is turned off when not in use.

BATTERY MAINTENANCE

- Charge the battery regularly to keep it at optimum performance, even when the watch is not in use. For example, fully charge the watch at least every 6 months.

IMPORTANT SAFETY INFORMATION

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the below precautions.

- Do not attempt to replace the battery, open the device or disassemble your Interactive Watch. Doing so can result in a safety hazard.
- Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on the watch.
- Do not short circuit.
- Do not expose to high temperatures/humidity or place near a heat source.
- Do not leave in direct sunlight for any length of time.
- Do not dispose of in a fire, as substances in your Interactive watch/battery may harm the environment or cause injury if handled or disposed of improperly.
- Do not handle if the display is cracked.
- Do not handle damaged or leaking batteries.
- Keep your Interactive Watch dry and do not charge if wet.
- Do not wear your Interactive Watch while charging it.
- If you find the time between charges has considerably shortened with no change in usage, the battery could be nearing the end of its life. Please dispose of this product as described in this manual.

PLEASE NOTE

TIKKERS™ Interactive is not a toy. Some products contain small components that could be a choking hazard, and are not intended for use by small children below 6 years of age.



WARNING!
CHOKING HAZARD - Contains small parts not suitable for children under 3 years or any individuals who have a tendency to place inedible objects in their mouths.

CARE & MAINTENANCE

1. Keep the rubber cover over the micro USB port closed tightly while it is not in use in order to prevent dust or water from getting into the micro USB port.
2. Do not wear your TIKKERS Interactive watch whilst applying sprays or creams.
3. Do not allow contact with any corrosive agent (e.g. paint, solvents or adhesives as this may affect the case and finish).
4. Your TIKKERS Interactive watch is splash proof only. It is NOT suitable for swimming and showers. Do not immerse in water.
5. Do not try to replace or disassemble the battery.
6. Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by gently wiping the lens with a dry cloth.

GUARANTEE

Quality and style are at the heart of what we do. Tickers certifies this interactive watch is produced using premium materials and is fully tested before leaving our manufacturing centre.

Your timepiece is guaranteed against any defective parts and construction for 12 months from the date of purchase. Your guarantee is only valid if you present your original receipt when returning the item. This guarantee provides you with rights in addition to your consumer statutory rights and therefore does not limit your statutory rights. Please note this guarantee does not cover lenses, bands, straps or bracelets, water penetration or batteries. Additionally, breakages caused by accident or maltreatment are not covered.

All products should be returned to:
PH Services, Precision House, Unit 4, Starley Way, Solihull, B37 7GN.

CONTACT US



If you require any further assistance using your TIKKERS interactive watch we are here to help!

You can also contact our friendly, UK based customer service team Monday to Friday, 9AM to 5PM on:

+44 (0) 121 524 1400 tickers@peershardy.co.uk

There is also lots of information on our website tickers.co.uk that you may find helpful.

IMPORTANT SAFETY INFORMATION

BEFORE USING THE PRODUCT, PLEASE FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE!

Do not attempt to replace the battery, open the device enclosure or disassemble your TIKKERS product. Doing so can result in a safety hazard • Do not use your TIKKERS product if the display is cracked • Substances within TIKKERS smartwatch battery may harm the environment or cause injury if handled or disposed of improperly. In the unlikely event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek IMMEDIATE medical attention • Do not expose your TIKKERS product to extremely high or low temperatures • Do not use TIKKERS product in a sauna or steam room • Do not use abrasive cleaners to clean your watch • Remove your watch immediately if it feels warm or hot • Do not attempt to wear or operate your watch whilst charging • Do not charge your TIKKERS product if wet • Do not check notifications or other applications on the products display while driving or in other situations where distractions could be hazardous. Always be aware of your surroundings when using TIKKERSE products and services • When the battery is fully charged disconnect from charger • Ensure your watch correctly engages with the charging contacts • In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability can be accepted by TIKKERS • Before each use, please check the product for damages & do not use if the product is damaged • This is not a toy • Never attempt to open your watch, this may result in danger • Protect the product from strong impacts, vibrations, direct sunlight, and dirt • Do not place heavy objects on the product • Do not exert pressure on the product • Avoid strong magnetic fields e.g. loudspeakers • Salt and thermal water can lead to the corrosion of metal parts. • The integrated rechargeable battery cannot be removed or replaced. • Do not operate the product near heat sources, e.g. radiators or other devices emitting heat • Do not cover the product during operation or charging • Your TIKKERS watch will help calculate steps walked. Please consult a doctor before starting new exercise regimes.

WARNING - MEDICAL DEVICE INTERFERENCE

Tickers Interactive watches may contain components that emit electromagnetic fields, please be aware that these models contain magnets. These electromagnetic fields and magnets may interfere with medical devices, such as pacemakers and implanted defibrillators. Please consult your doctor and medical device manufacturer if you use any medical device before using a Tickers Interactive watch. If you have any questions or concerns, please contact us, you'll find our contact details above.

BATTERY: Built-in rechargeable lithium battery.

DISPOSAL OF GOODS ◀ The crossed out wheellie bin symbol is to remind you that waste electrical products, batteries and accumulators should not be disposed of in household waste.

If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility.

- Do not dispose of your TIKKERS product within household waste.
- Disposal of your TIKKERS packaging and product should be done in accordance with local regulations.



RAIM2008